


Servicing Diesel direct injection system

Fitting locations overview

1. Intake manifold pressure sender -G71
2. Exhaust gas recirculation valve -N18
3. Solenoid valve for charge pressure control -N75
4. Connector
2 pin
For water level sender - G120
5. Water level sender -G120
6. Connector
8 pin
For quantity adjuster - N146
For slide travel potentiometer -G99
For fuel temperature sender -G81

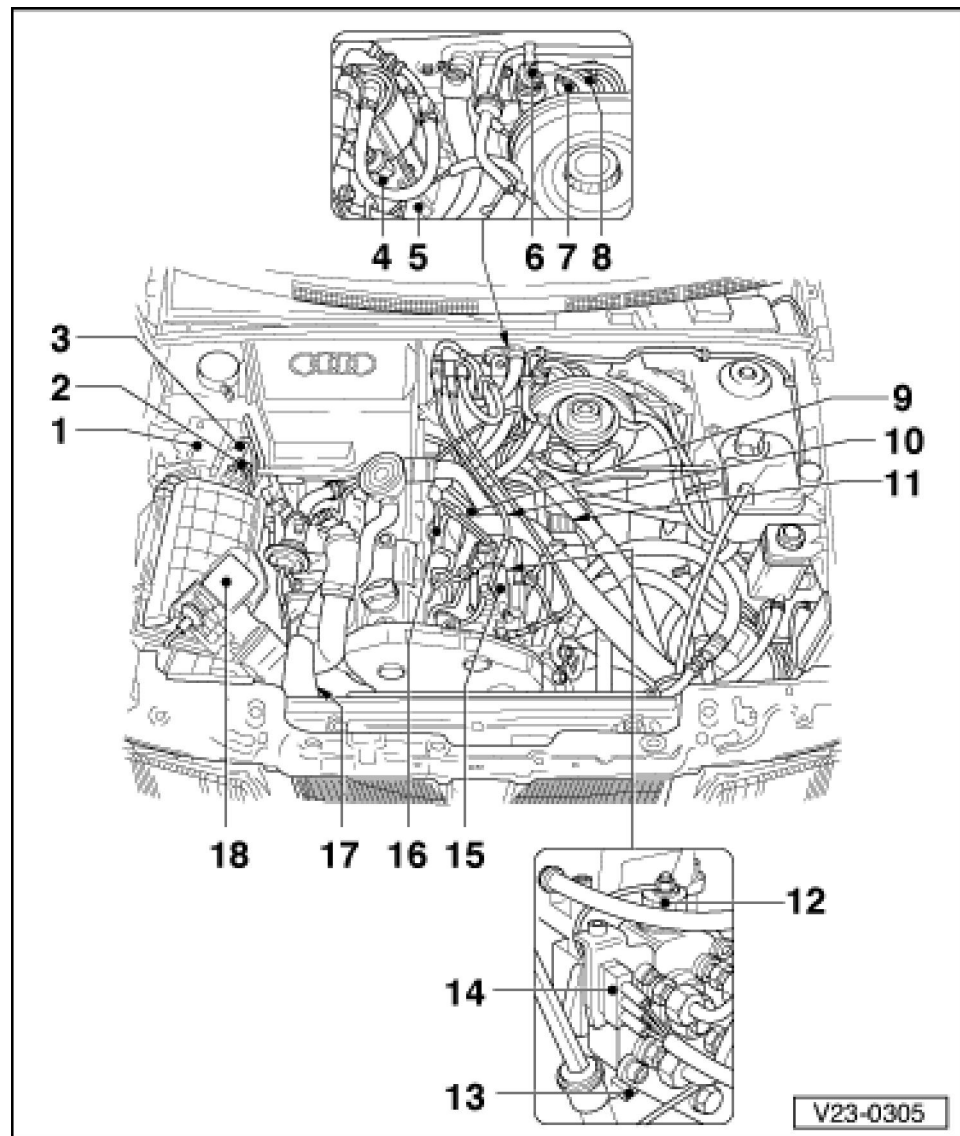

7. Connector
3 pin
For engine speed sender -G28
8. Connector
2 pin
For needle lift sender -G80
9. Coolant temperature sender -G62
10. Engine speed sender -G28
11. Speedometer sender -G22
12. Fuel cut-off valve - N109
13. Commencement of injection valve - N108